

# PULLMAN-HOLT

 
## Operation & Care Instructions

Save For Future Reference

### Model U10

#### Upright Vacuum Cleaner

This vacuum cleaner is a high quality, precision made product. All parts used in the manufacturing of this vacuum cleaner have passed rigid quality control standards prior to assembly and an "each unit" final inspection prior to packaging is your assurance of proper assembly. This vacuum cleaner was protectively packed to prevent possible damage in transit. Should damage occur, please notify the transporting carrier immediately for loss and/or claim.

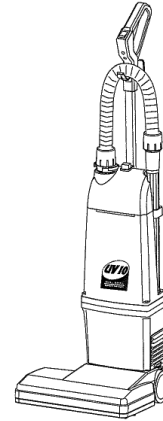

## IMPORTANT SAFEGUARDS

Using the attachments extends the cleaning power to your furniture, drapery, walls and window blinds.

Properly operated and maintained, your Pullman-Holt vacuum cleaner will provide high performance floor and carpet cleaning for years to come.

### EXTENSION CORDS:

Machines that have 3 wire cords requiring grounding must only be used with extension cords that have 3-prong grounding type plugs and 3-pole receptacles.

To determine the minimum wire size required, refer to the chart below:

Before using an extension cord, inspect it for loose or exposed wires, damaged insulation and defective fitting.

Nameplate Rating-Amps	Minimum Wire Size (AWG) of Extension Cord							
	Total Extension Cord Length (Feet)							
	25	50	75	100	125	150	175	200
0-10.0	18	18	16	16	14	14	12	12
10.1-13.0	16	16	14	14	14	12	12	12
13.1-15.0	12	12	12	12	12	12	12	-

**NOTE:** Warranty claims will be honored ONLY if handled by an authorized Pullman-Holt Service Center unless other prior arrangements have been made with the Pullman-Holt Service Department.

### CAUTION

Never lubricate the vacuum cleaner motor.  
The motor bearings are permanently sealed.  
This vacuum is intended for indoor use only.

# IMPORTANT SAFETY INSTRUCTIONS

When using an electrical appliance, basic precaution should always be followed, including the following:

READ ALL INSTRUCTIONS BEFORE USING THIS VACUUM CLEANER

## WARNING

**To reduce the risk of fire, electric shock or injury:**

1. Do not leave appliance when plugged in. Unplug from outlet when not in use and before servicing.
2. Do not expose to rain. Store indoors.
3. Do not allow to be used as a toy. Close attention is necessary when used by or near children.
4. Use only as described in this manual. Use only manufacturer's recommended attachments.
5. Do not use with damaged cord or plug. If appliance is not working as it should, has been dropped, damaged, left outdoors, or dropped into water, contact Customer Service.
6. Do not pull or carry by cord, use as a handle, close a door on cord, or pull cord around sharp edges or corners. Do not run appliances over cord. Keep cord away from heated surfaces.
7. Do not unplug by pulling on cord. To unplug, grasp the plug, not the cord.
8. Do not handle plug or appliance with wet hands.
9. Do not put any object into openings. Do not use with any opening blocked; keep free of dust, lint, hair and anything that may reduce air flow.
10. Keep hair, loose clothing, fingers and all parts of the body away from openings and moving parts.
11. Do not pick up anything that is burning or smoking, such as cigarettes, matches, or hot ashes.
12. Do not use without dustbag and/or filters in place.
13. Turn off all controls before unplugging.
14. Use extra care when cleaning on stairs.
15. Do not use to pick up flammable or combustible liquids such as gasoline, or use in areas where they may be present.
16. This vacuum is for commercial use only.
17. Connect to a properly grounded outlet only. See grounding instructions.

SAVE THESE INSTRUCTIONS

# IMPORTANTES MESURES DE SÉCURITÉ

L'utilisation d'un appareil électrique demande certaines précautions:

LIRE TOUTES LES INSTRUCTIONS AVANT DE FAIRE FONCTIONNER CET APPAREIL

## AVERTISSEMENT:

**Pour réduire les risques d'incendie, de choc électrique ou de blessure:**

1. Ne pas laisser l'appareil sans surveillance lorsqu'il est branché. De brancher lorsque l'appareil n'est pas utilisé et avant l'entretien.
2. Ne brancher qu'à une prise de courant avec mise à la terre. Voir les instructions visant la mise à la terre.
3. Ne pas permettre aux enfants de jouer avec l'appareil. Une attention particulière est nécessaire lorsque l'appareil est utilisé par des enfants ou à proximité de ces derniers.
4. N'utiliser que conformément à cette notice avec les accessoires recommandés par le fabricant.
5. Ne pas utiliser si le cordon ou la fiche est endommagé. Retourner l'appareil à un atelier de réparation s'il ne fonctionne pas bien, s'il est tombé ou s'il a été endommagé, oublié à l'extérieur ou immergé.
6. Ne pas tirer, soulever ou traîner l'appareil par le cordon. Ne pas utiliser le cordon comme une poignée, le coincer dans l'embrasure d'une porte ou l'appuyer contre des arêtes vives ou des coins. Ne pas faire rouler l'appareil sur le cordon. Garder le cordon à l'écart des surfaces chaudes.
7. Ne pas débrancher en tirant sur le cordon. Tirer plutôt la fiche.
8. Ne pas toucher la fiche ou l'appareil lorsque vos mains sont humides.
9. N'insérer aucun objet dans les ouvertures. Ne pas utiliser l'appareil lorsqu'une ouverture est bloquée. S'assurer que de la poussière, de la peluche, des cheveux ou d'autres matières ne réduisent pas le débit d'air.
10. Maintenir les cheveux, les vêtements amples, les doigts et toutes les parties du corps à l'écart des ouvertures et des pièces mobiles.
11. Ne pas aspirer de matières en combustion ou qui dégagent de la fumée, comme des cigarettes, des allumettes ou des cendres chaudes.
12. Ne pas utiliser l'appareil si le sac à poussière ou le filtre n'est pas en place.
13. Mettre toutes les commandes à la position ARRÊT avant de débrancher l'appareil.
14. User de prudence lors du nettoyage des escaliers.
15. Ne pas aspirer des liquides inflammables ou combustibles, comme de l'essence, et ne pas faire fonctionner dans des endroits où peuvent se trouver de tels liquides.
16. Avertissement- Pour réduire les risques de choc électrique, ne pas exposer à la pluie et garder l'aspirateur à l'intérieur.
17. Appareils mis à la terre: "Ne brancher qu'à une prise de courant avec mise à la terre. Voir les instructions visant la mise à la terre.

CONSERVER CES INSTRUCTIONS

# GROUNDING INSTRUCTIONS

This appliance must be grounded. If it should malfunction or breakdown, grounding provides a path of least resistance for electric current to reduce the risk of electric shock. This appliance is equipped with a cord having equipment grounding conductor and grounding plug. The plug must be inserted into an appropriate outlet that is properly installed and grounded in accordance with all local codes and ordinances.

 
## WARNING

Improper connection of the equipment grounding conductor can result in a risk of electric shock. Check with a qualified electrician or service person if you are in doubt as to whether the outlet is properly grounded.

Do not modify the plug provided with the appliance - if it will not fit the outlet, have a proper outlet installed by a qualified electrician.

This appliance is for use on a nominal 120 - Volt circuit, and has a grounded plug that looks like the plug illustrated in sketch A below. A temporary adapter that looks like the adapter illustrated in sketches B and C may be used to connect this plug to a 2-pole receptacle as shown in sketch B if a properly grounded receptacle is not available. The temporary adapter should be used only until a properly grounded outlet (sketch A) can be installed by a qualified electrician. The green colored ear, lug, or the like extending from the adapter must be connected to a permanent ground such as a properly grounded outlet box cover. Whenever the adapter is used, it must be held in place by a metal screw.

NOTE: In Canada, the use of a temporary adapter is not permitted by the Canadian Electrical Code.

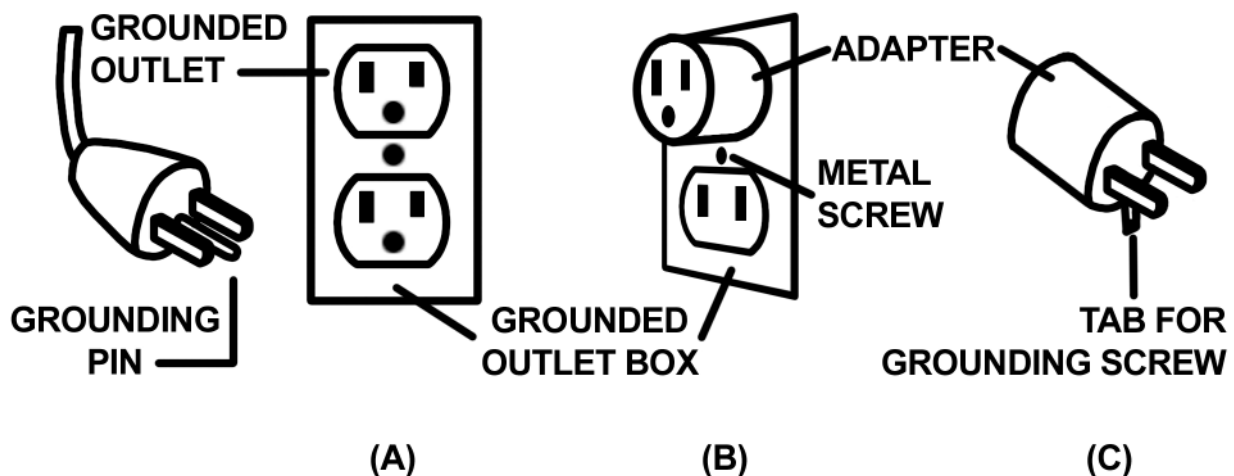

# INSTRUCTIONS VISANT LA MISE À LA TERRE

Cet appareil doit être mis à la terre. En cas de défaillance ou de panne éventuelles, la mise à la terre fournit au courant un chemin de moindre résistance qui réduit le risque de choc électrique. Cet appareil est pourvu d'un cordon muni d'un conducteur de terre et d'une fiche avec broche de terre. La fiche doit être branchée dans une prise appropriée correctement installée et mise à la terre conformément aux règlements et ordonnances municipaux.

## AVERTISSEMENT

Un conducteur de terre mal raccordé peut entraîner un risque de choc électrique. Consulter un électricien ou un technicien d'entretien qualifié si vous n'êtes pas certain que la prise est correctement mise à la terre. Ne pas modifier la fiche fournie avec l'appareil - si elle ne peut être insérée dans la prise, faire installer une prise adéquate par un électricien qualifié.

Cet appareil est destiné à un circuit de 120 V et est muni d'une fiche de mise à la terre semblable à celle illustrée par le croquis A de la figure. S'assurer que l'appareil est branché à une prise de courant ayant la même configuration que la fiche. Aucun adaptateur ne devrait être utilisé avec cet appareil.

La mise à la terre selon les croquis B et C n'est pas permise au Canada.

# ABOUT THE VACUUM CLEANER

## Operation Guidance:

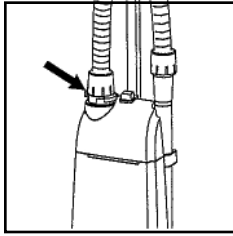 


Figure A

Press the button on hose cuff and take off connector.

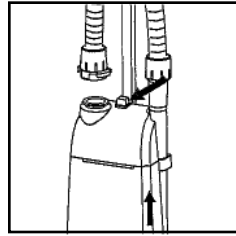 


Figure B

Press button on the dust cover.

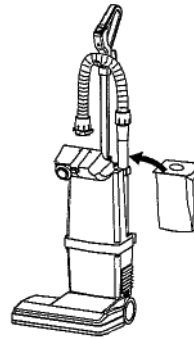 


Figure C

Insert the dust bag into the bag housing. Make sure it is inserted correctly.

**CAUTION:** This model is equipped with a safety switch that won't allow the machine to work without a dust bag.



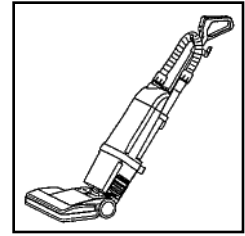 


Figure D

 Remove the power cord and plug the machine in to the outlet. Pull down on the handle and turn on the machine at the power switch.

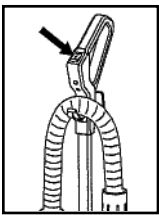


This machine has a 3-position switch. Press the switch backwards and the vacuum will start to operate. Press the switch forward to turn on the vacuum and brush roll at the same time. When the switch is in the middle position the machine is OFF. **CAUTION:** When the switch is in the forward position, and the machine is left in the upright position, a safety switch will automatically cut the machine off.

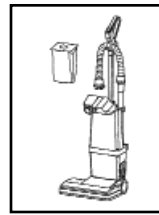 


When replacing the filter bag, open the dust cover and remove the bag. Replace the bag with an original factory supplied filter bag and close the cover. You may then continue cleaning.

### CAUTION:

 1. Make sure the machine is completely turned off before opening the cover.
2. Properly dispose of the dust bag.

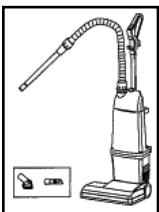

 Remove the hose from the main unit. Turn on the switch and the hose can be used separate from the machine. Use the attachments included for various needs. The combination Nozzle can be used for cleaning crevices, corners, baseboards, etc. The Dust Brush can be used for furniture or other surfaces.

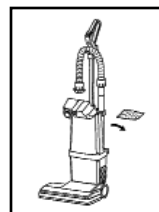


### Maintenance:

Remove the filter from the bottom of the dust cover and rinse out with water for cleaning. Allow filter to completely dry and then place back in the machine.

### CAUTION:

 
1. The filter should be cleaned every 5-6 days of use or more if needed.
2. Do not operate with the dust bag removed.
3. Check to make sure the dust bag has been installed correctly and that there is no damage to bag prior to use.
4. Make sure the machine is completely turned off prior to removing the dust bag to ensure no debris falls into the motor.

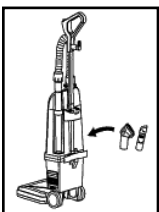

### Storage:

Turn the machine OFF by moving the switch to the middle position and remove the plug from the outlet. Return the machine to the upright position and roll the cord around the cord hooks. Replace the nozzle and the brush on the handle.

 **CAUTION:** Do not store the machine directly in the sun or rain.

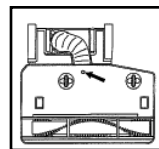

To replace the belt and/or clean the brush roll, remove the screw with a screwdriver and turn knob to remove the bottom plate and take out the brush roll and belt for cleaning and maintenance.



### CAUTION:

   
1. The belt should be replaced if it is binding or is not working properly.
2. The brush roll needs to be cleaned and free of any debris or it will not work properly.
3. Make sure to unplug the machine prior to any maintenance on the belt or brush roll.

## Dust Empty and Maintenance:

### Dust Empty:

If the dust full indicator light is on, replace old bag with a new bag.

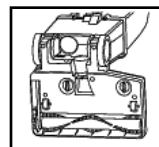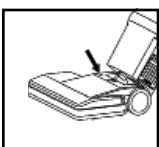

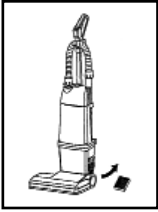

PUSH THE HEPA FILTER COVER BUTTON, OPEN THE COVER AND TAKE OUT THE HEPA FILTER FOR CLEANING OR REPLACEMENT. RE-INSTALLING THE HEPA FILTER IS THE REVERSE OF THE REMOVAL PROCESS. BE SURE TO CLOSE THE HEPA COVER AND MAKE SURE IT IS SEALED SECURELY.  
**CAUTION:** THE HEPA FILTER NEEDS TO BE CLEANED OR REPLACED AT LEAST ONCE A YEAR.

## Troubleshooting:

Problem	Cause	Solution
Motor will not start.	<ol style="list-style-type: none"> <li>1. The plug is not entirely plugged into the socket or the socket does not have electricity.</li> <li>2. The switch is in the OFF position.</li> </ol>	<ol style="list-style-type: none"> <li>1. Re-insert the plug into the socket or try another socket.</li> <li>2. Turn on the power switch.</li> </ol>
Suction is low.	<ol style="list-style-type: none"> <li>1. The dust bag is full.</li> <li>2. The filter, hose, brush etc. is blocked.</li> </ol>	<ol style="list-style-type: none"> <li>1. Replace a new dust bag.</li> <li>2. Clean the filter, hose, brush etc.v</li> </ol>

If trouble still exists, please contact our maintenance service department.

## Technical Specification:

Voltage	120V~	Max Vacuum	≥ 20kpa
Frequency	60Hz	Noise	≤ 76db(A)
Power Input	1200W		

---

# LIMITED WARRANTY

---

The vacuum cleaner is warranted for 1 year from the date of purchase as shown on your distributor's invoice. Parts not covered under warranty are power cords, filters, motor brushes and squeegee blades. The warranty covers only failure due to defective parts or workmanship and will be

invalidated by improper application and abuse.

In **NO** circumstance should you return a failed unit to the factory. If you experience any problems with your vacuum during the warranty period, contact the Customer Service.

**NOTES:**

